




Apply heat transfer and heat seal labels to a smooth, flat surface.
Avoid applying near or over seams, creases, stitching, buttons,
embellishments or belt loops.

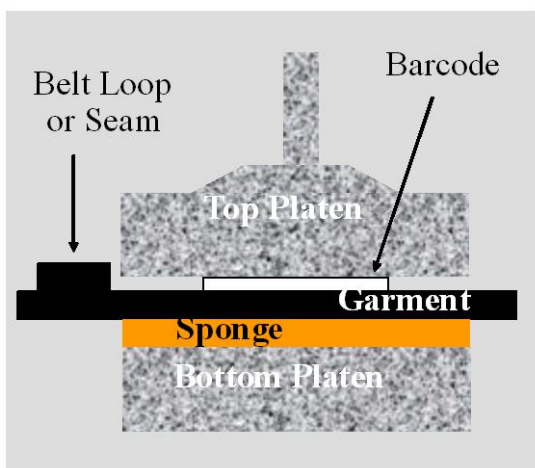

THE RIGHT WAY

Placing uneven surfaces OFF of the platen area provides a smooth, flat, even application surface for heat transfer and heat seal labels. Combined with the routine cleaning or replacement of Teflon cover and sponges, labels will be properly bonded.

THE WRONG WAY

Applying heat transfer or heat seal labels near uneven surfaces will result in improper application. This extra thickness will create a gap between the platens resulting in inconsistent pressure. Over time, labels will not remain well bonded.

