


*Apply labels to a smooth, flat surface.
Do not apply over or near seams, creases, stitching,
buttons, embellishments or belt loops.*



THE RIGHT WAY

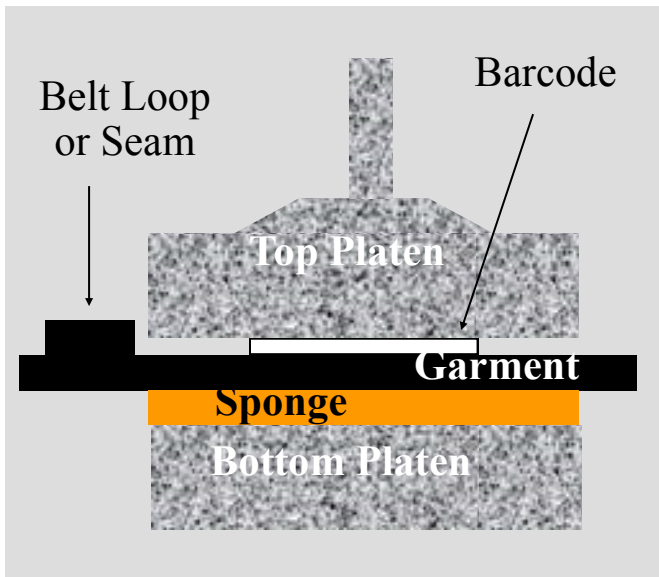

By placing uneven surfaces OFF of the platen area you will provide a smooth, flat, even application surface for barcodes. Combined with the routine cleaning or replacement of Teflon and sponges, barcodes will be properly bonded.

THE WRONG WAY



Applying barcodes near uneven surfaces will result in improper application. This extra thickness will create a gap between the platens resulting in inadequate pressure. Barcodes will NOT remain well bonded and will lift in this area.

